

Transferring MP3 Audio Files to the WowBible Color

- All desired Music and Audio files for use on the WowBible Color must be in .MP3 format. Some .WMA (Windows Media Player) audio files will work as well.

Step 1: Connecting the WowBible to your Computer in “Udisk Mode”

***Note: It is recommended to disconnect all removable devices (such as Flash Cards, Memory Sticks, Digital Cameras, etc..) before connecting the WowBible or entering “Udisk Mode”.

First, Power off your WowBible if it’s not already off.

With the WowBible “Off”, Connect the device to your computer using the USB Cable provided.

After you connect to the computer, the WowBible Screen will temporarily show the word “**Initializing**”.

The WowBible screen will now show the options “**System**” or “**USB Disc Mode**”


Select “**USB Disc Mode**” (the option on the right)

The WowBible screen will now say “USB Disk Mode, Stop USB disk Mode before disconnection!” and you will hear a sound if your computer speakers are turned on.

If your system does not automatically open the device, click on the Start Menu at the bottom left corner of your screen:



Select “**My Computer**” from the Start Menu:

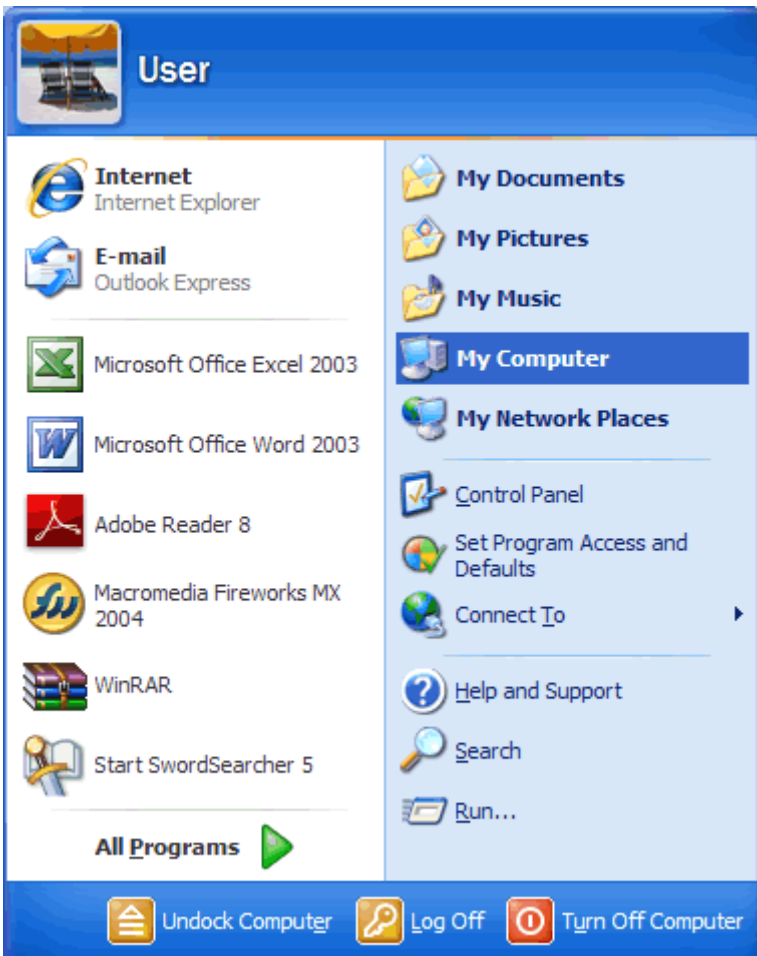


If you cannot access “**My Computer**” from the Start Menu, or if your start menu looks different than the image above, try accessing it from your desktop:



Access the “**My Computer**” folder by double-clicking the appropriate icon.

Step 2: Open the WowBible Folders through “My Computer”

Depending on how many removable devices are connected to your computer through USB ports, you may see multiple devices in this folder:

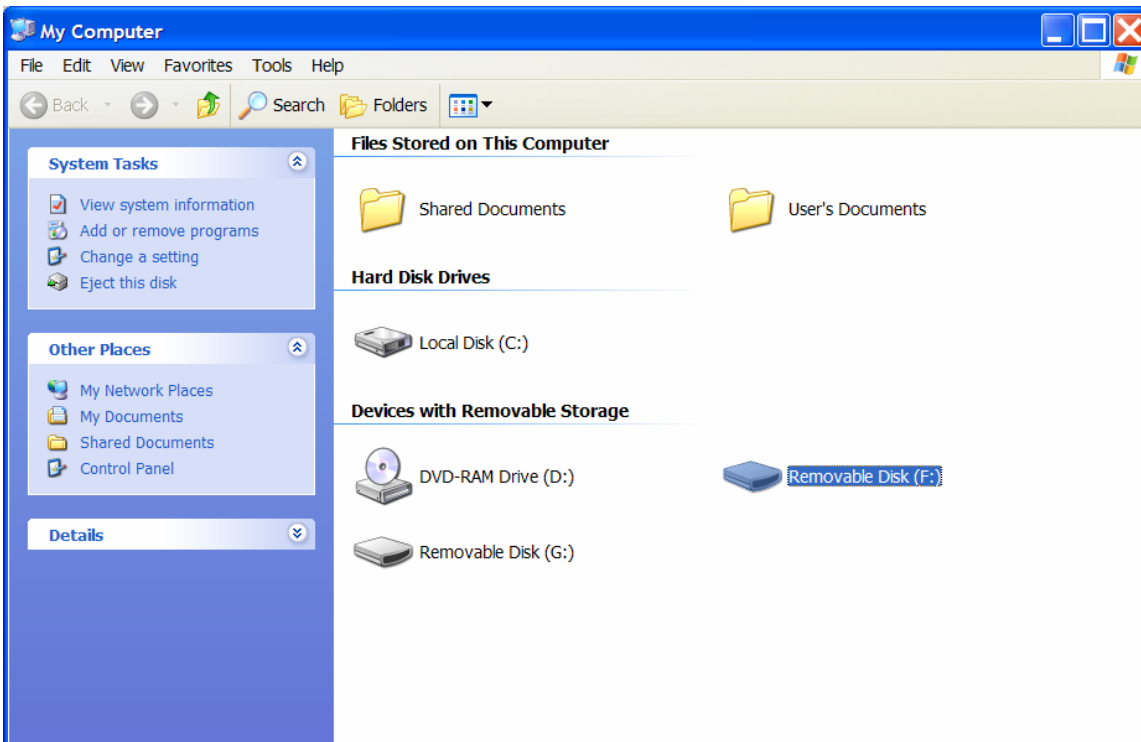


On the example above “**Removable Disk (F:)**” is the **WowBible Color**, while “**Removable Disk (G:)**” is the **Micro-SD card slot**. Even if an SD card is not inserted into the slot, the computer will recognize that potential memory. If an SD card was inserted in the slot, this is how you could access the card’s memory.

(***Please Note: These Drives may have different letters depending on which USB port is occupied on your computer)

To access the WowBible folders, **Double-Click** on the appropriate Removable Disk icon (Removable Disk (F:)) for the WowBible in the example above).

You should see the following WowBible folders:

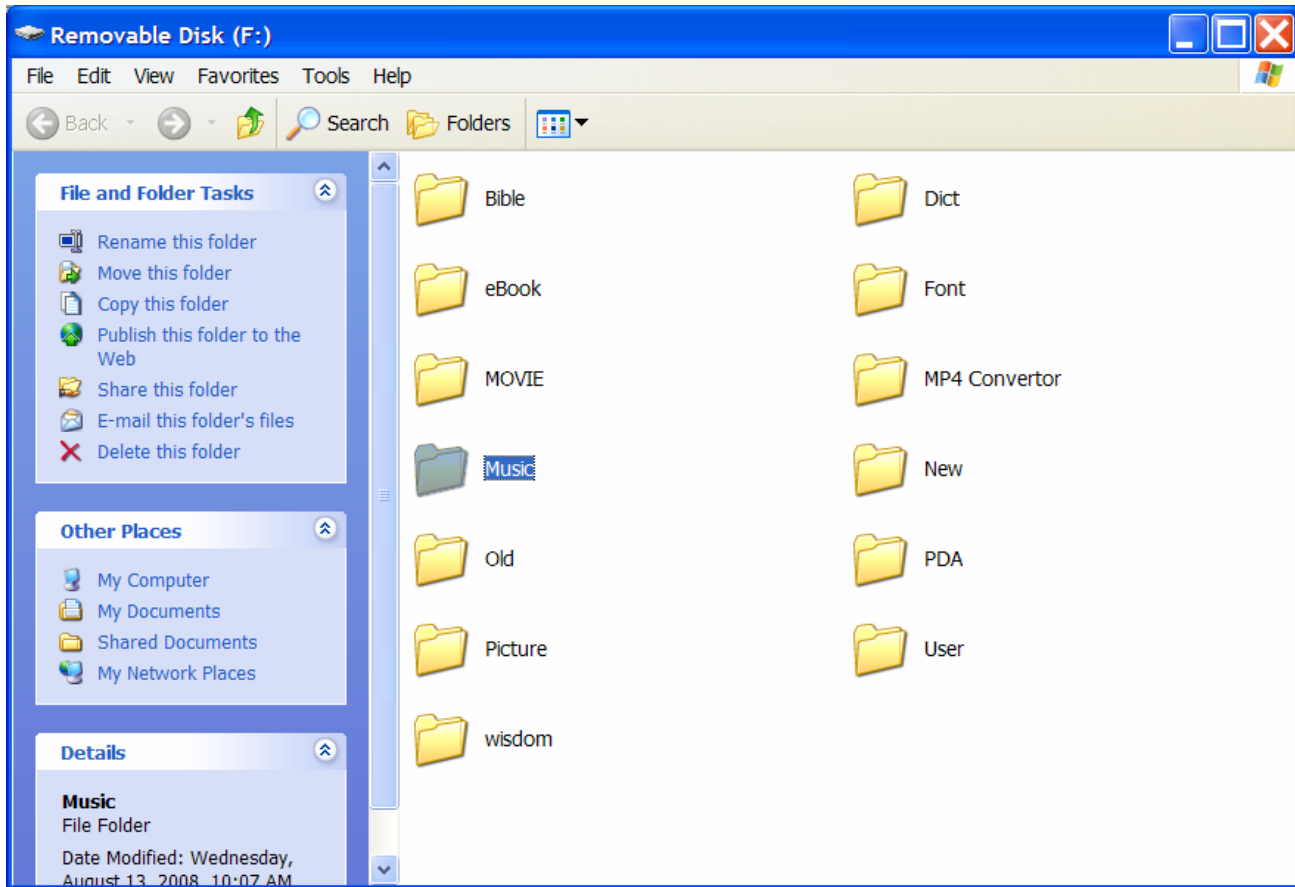

Step 3: Locate MP3 Music and Audio Files on your Computer


MP3 Music files must be added to the WowBible “**Music**” folder as shown above to allow for playback on the WowBible.

***Please note that since the WowBible does not come pre-loaded with any MP3 Music files, the “Music” folder will currently be empty.


If you have MP3 Music on your Windows computer it could be in the “**My Music**” folder. Click on the Start Menu at the bottom left corner of your screen:



Select **“My Music”** from the Start Menu:

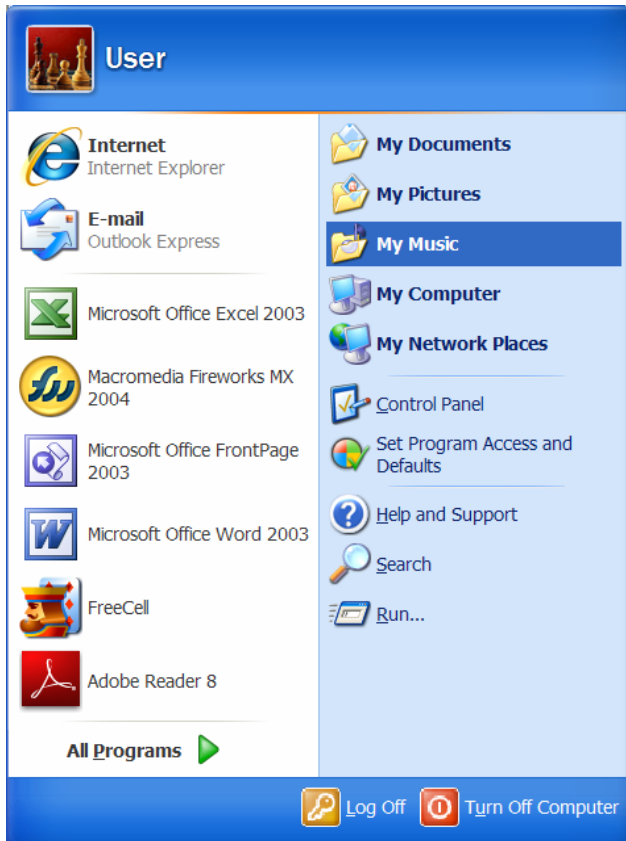


The **“My Music”** folder could contain numerous file folders including Artist’s Names, Sample Music, as well as individual MP3 files.

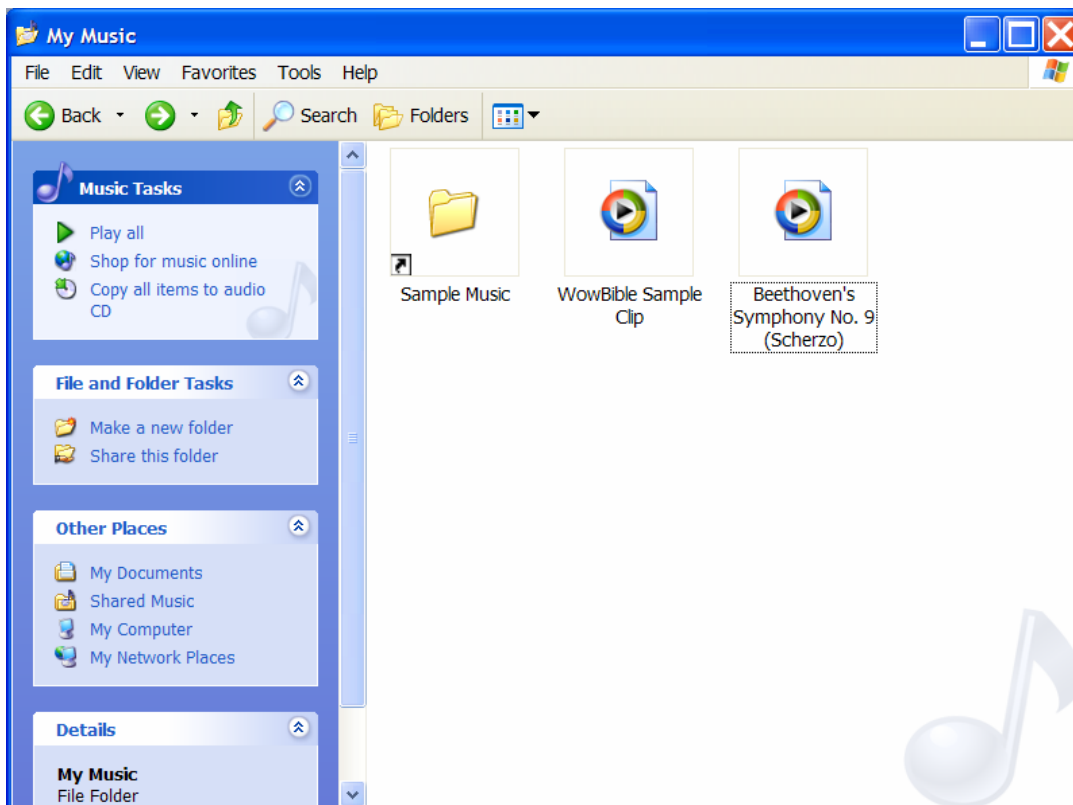


On the example above, if we wanted to add the **“Beethoven’s Symphony No. 9”** MP3 to the WowBible, first Right-Click on the appropriate file name, then Left-Click the word **“Copy”** from the menu that appears.

Once the MP3 file has been copied, go back to the “Music” folder of the WowBible:

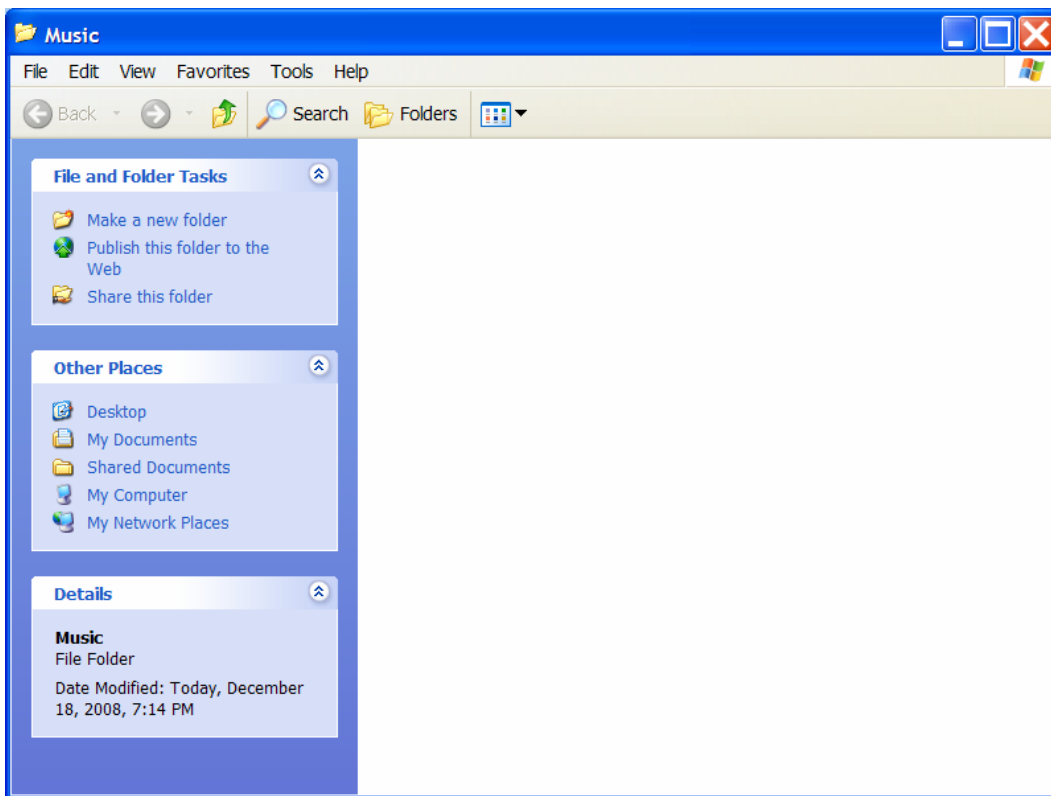

Right-Click on the white background of the WowBible’s “Music” folder, then Left-Click the word “Paste” from the menu that appears. This will add the selected file to the WowBible:

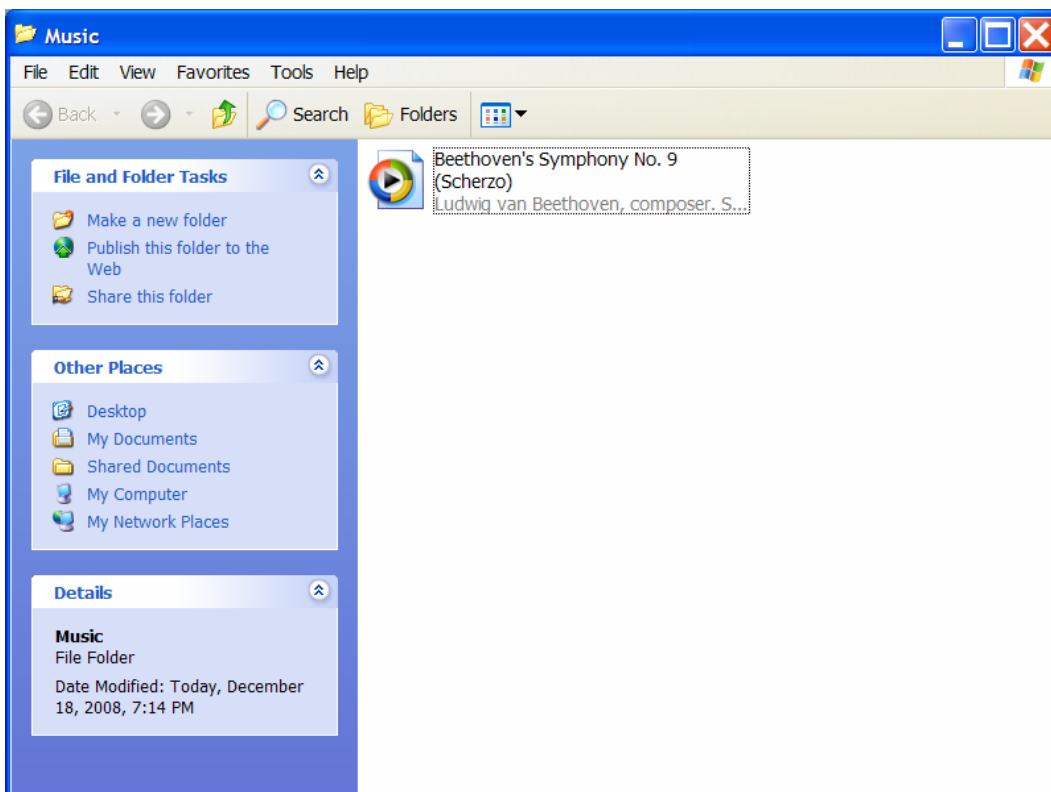

Repeat this same process with any other desired MP3 files or clips.

***Note: It is also possible to Copy and Paste entire Artist and Album folders into the WowBible Music folder. Doing so will allow you to maintain the same Folder Names and navigational structure of the music on your computer.

Step 4: Safely Remove the WowBible from your Computer

Once all desired MP3 Music files are added, it is now necessary to “**Safely Remove**” the WowBible from your computer.

Before disconnecting the WowBible from the USB cable, **Left-Click** on the “**Safely Remove Hardware**” icon at the Bottom Right corner of your screen (next to the clock):



The “**Safely Remove Hardware**” icon is the **Green Left-Pointing Arrow hovering over a Grey Disk**.



(When the pointer is hovering over the correct icon, the words “**Safely Remove Hardware**” will appear.)

Left-Click the “**Safely Remove Hardware**” icon.

Then **Left-Click** on “**Safely Remove USB Mass Storage Device – Drives (G:, H:)**”

(***Please Note: These Drives may have different letters depending on which USB port is occupied on your computer)

After doing so, a popup message will appear saying “**Mass Storage Device can now be safely removed**”, and the **WowBible screen will now go to the Main Menu**.

From the Main Menu of the WowBible screen, tap the “**MUSIC**” icon to test and play the MP3 files that were added.

Congratulations! You can now hear your favorite music anywhere that you take the WowBible!